

Seat Belt Extenders


The metal tongue on the seat belt you are going to use and extender on needs to be a particular shape and size.

It must be rectangular in shape

Below are details on how to measure your seat belt tongue.

Measure the following

- **Width of metal tongue**—this needs to be 22mm or 25mm

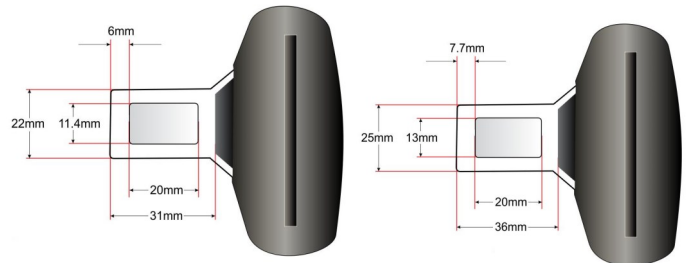

- **Length of metal tongue from end to where the metal starts to splay out.**

This needs to be around 33mm. Longer than this (ie 45mm) or shorter than this (ie 25mm-28mm) then the Australian made extenders will not fit.



- **Distance from end of metal tongue to where hole in tongue starts.** This needs to be around 6-8mm. Distances such as 10mm will not fit the extenders.

Examples of seat belt tongues that there are no extenders for.

